FlexTop 2202 Temperature Transmitter

4...20 mA transmitter for Pt100 sensors

2-, 3- or 4-wire sensors

Accuracy better than 0.25°C

Sensor offset correction

Automatic/configurable cable resistance compensation (2-wire)

Sensor error detection

2-way configuration

Configurable damping and status indication

Engineering unit °C or °F

PC datalogging

Excellent temperature stability

Ex ia IIC T5/T6, ATEX II 1G



Description

FlexTop 2202 is a 4...20 mA loop-powered transmitter for Pt100 sensors

Either 2-, 3- or 4-wire sensors can be used. For 2-wire sensors an automatic balancing of the sensor cable resistance is possible with shorted sensor cable. The cable resistance can be manually configured as well.

Using a PC, the Windows-based Flex-Program and a FlexProgrammer configuring unit, the following parameters can be configured via the output connectors (2-way communication): TAG no., number of wires, cable resistance, error detection level, measuring range/unit, damping, offset and status indication.

The Flex-Program has a datalogging facility enabling the user to monitor measuring results or calibrate the measuring setup.

FlexTop 2202 is embedded in silicone which makes it resistant to humid environments.

FlexTop 2202, fitting into the DIN B housing, has a 6 mm center hole for quick sensor replacement. The spring loaded mounting screws ensure a safe fastening even in vibrating environments.

Technical Data

Input

Accuracy

Span < 250°C: < 0.25°C {2} Span > 250°C: 0.1% of span Sample time < 0.7 sec.

Pt100 Standard IEC/DIN/EN 60 751-2 RTD measuring current 0.3 mA, continuously 2-, 3- or 4-wires {1} Sensor type

Sensor short detection < -225°C Sensor break detection > 875°C Error detection delay < 10 sec.

Compensation for

cable error < 0.02°C/Ohm (3-wire) Cable resistance Max. 20 Ohm /wire {1} Measuring range -200...850°C {1} °C or °F {1} Measuring unit Minimum span 25°C **Protection** $+/-35 V_{dc}$ 50 and 60 Hz Suppression Resolution 14 bit Repeatability < 0.1°C

IEC 770 6.2.4.2 Ripple immunity Offset Adjustment Max. ± 10°C {1}

Output

Signal span 4...20 mA, 2-wire **Accuracy** < 0.1% of signal span

8...35 V_{dc} Supply range $3\,\mathrm{V}_{\mathrm{rms}}$ Ripple immunity

 $R_{i} \le (V_{cc} - 8)/23 [kOhm]$ Load equation Up/Down scaling limits 23 mA/3.5 mA {1} **Damping** 0...30 sec. {1}

Protection Reversed polarity protection

Resolution 12 bit Effect of variations in supply voltage:

Output current 0.01% per volt TAG No.

15 characters {1}

Environmental conditions

Operating temperature -40...85°C Storage temperature -55...90°C

Humidity < 98% RH, cond. (IEC 68-2-38) **Vibrations** GL, test 2 (IEC 68-2-6) Long-term test IEC 770 6.3.2

EMC data

Generic standards EN 61000-6-3, EN 61000-6-2

Product standards EN 61326 **NAMUR** NAMUR NE21

Ex ia IIC T5/T6, ATEX II 1G **Approval**

Supply range 8...28 V_{dc} Internal inductivity $L_i \leq 10 \mu H$ Internal capacity $C_i \leq 10 \text{ nF}$

Barrier data $U \leq 28~V_{_{dc}}$; $I \leq 0.1~A$; $P \leq 0.7~W$ Temperature class T1...T5: $-40 < T_{amb} < 85^{\circ}C$ $-40 < T_{amb}^{amb} < 50^{\circ}C$

Mechanical data

Dimensions ø44 x 19 mm **Protection class** Housing: IP 40

Other data

Temperature drift Tvp. 0.003% per °C

Max. 0.01% per °C

Power-on time 10 sec.

Test conditions

Configuration 0...100°C 23°C +/- 2°C Amb. temperature 24 VDC **Power supply**

Disposal of product and packing

According to national laws or by returning to Baumer

Notes

{1} Configurable

Lower range limit $\leq 100^{\circ}$ C {2}


Measuring Ranges

Туре	Standard	Range	Min. span	Accuracy
Pt100	DIN/EN/IEC 60751	-200850°C {2}	25°C	0.25°C
Lin. resistance		0500 Ohm	5 Ohm	1 Ohm

Ordering details - FlexTop 2202


	2202 000x (x)	
Туре	8´ Digit	
Not configured, standard safety	1	
Not configured, Ex ia IIC T5/T6, ATEX II 1G	2	
Not configured, Ex nA II T5, ATEX II 3G	3	
Configuration	9´ Digit	
Configuration according to customer specifications (default is 0120°C, 3-wire)	С	

Non-Ex Application

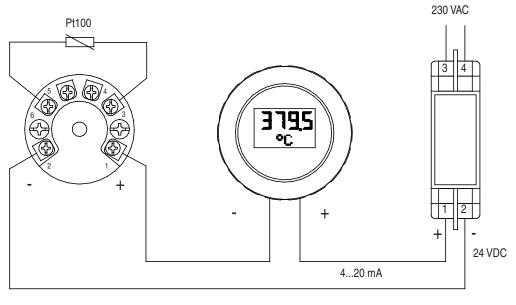


FlexTop 2202 FlexView Power supply

Ex Application

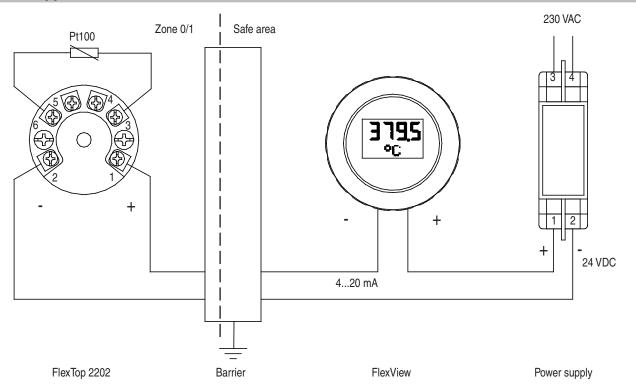


Configuration



Note: Disconnect loop supply before connecting the FlexProgrammer to FlexTop 2202.

Electrical Installation

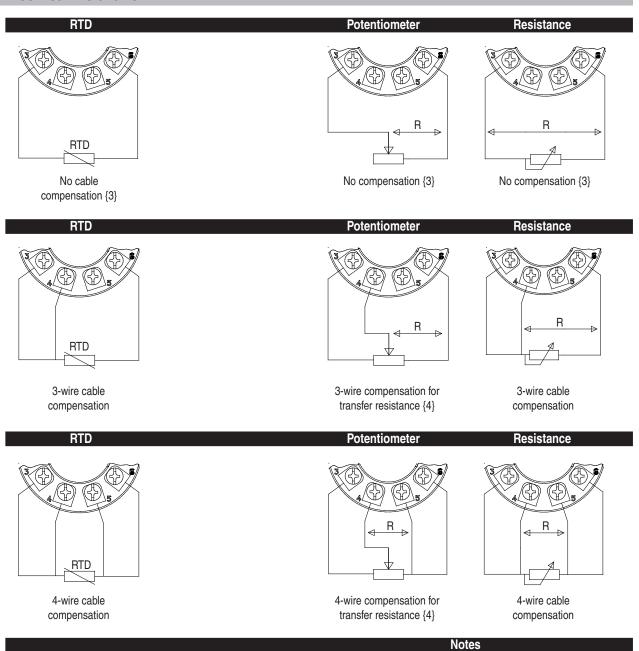

- Notes
- {3} Configurable compensation for cable resistance
- {4} Transfer resistance between element and wiper

